


Data transfer software SAUTER AFI-1.0

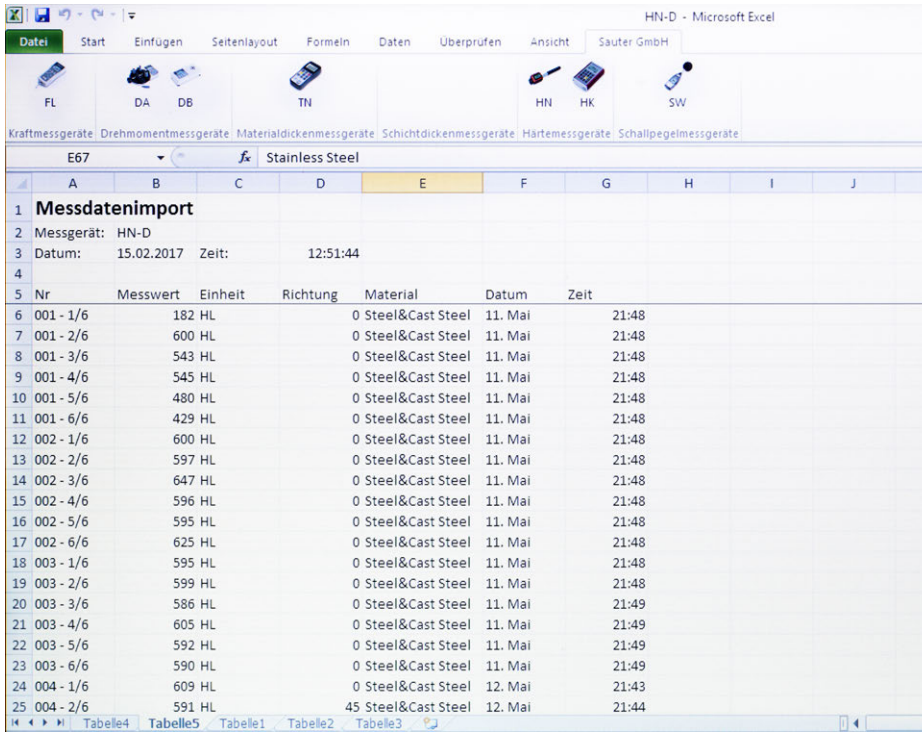

Plug-In for data transfer of measuring data from the measuring instrument and transfer to a PC, e.g. in Microsoft Excel®

Features

- Ideal for transferring measuring data from the internal data memory of the measuring instrument to Microsoft Excel®
- Solution: SAUTER AFI-1.0 plug-in for Microsoft Excel®. By doing this, an installation and learning yet another software can be avoided
- Compatible with Microsoft Excel® 2010 et seq.
- Easy handling: The measuring instrument is connected to the PC. At the push of a button, the SAUTER AFI-1.0 plug-in scans all the existing serial interfaces on the PC, finds the relevant measuring instrument and then reads the measuring data memory

Technical data

- Scope of supply: SAUTER AFI plug-in
- Suitable for SAUTER FC, FL, DA, DB, TN-US, TN-EE, HN-D, HK-D, SW series

Accessories

- **RS-232/USB adapter** to connect force measuring instruments with USB connector, SAUTER AFH 12
- **RS-232/Ethernet adapter** to connect force measuring instruments to an IP-based Ethernet network, SAUTER YKI-01
- **RS-232/PC connection cable** to connect models from the SAUTER FH range to a PC or a printer, SAUTER FH-A01
- **RS-232/PC connection cable** to connect models from the SAUTER FL range to a PC or a printer, SAUTER FL-A04
- **USB/PC connection cable** to connect models from the SAUTER FL, TN-US, TN-EE range to a PC or a printer, SAUTER FL-A01

STANDARD



Model	
SAUTER	
AFI-1.0	